



---

INSTRUCTION BOOK FOR  
Motorized Scenic  
Roller Screen

---

**DA-LITE**<sup>®</sup>

# Original Instructions

## Disclaimer

---

Milestone and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Da-Lite® is a registered trademark of Milestone AV Technologies. All rights reserved.

## Important Safety Instructions

---

When using your video equipment, basic safety precautions should always be followed, including the following:

1. Read and understand all instructions before using.
2. Position the cord so that it will not be tripped over, pulled, or contact hot surfaces.
3. If an extension cord is necessary, a cord with a current rating at least equal to that of the appliance should be used. Cords rated for less amperage than the appliance may overheat.
4. To reduce the risk of electric shock, do not disassemble this appliance. Contact an authorized service dealer when repair work is required. Incorrect reassembly can cause electric shock when the appliance is used subsequently.
5. The use of an accessory attachment not recommended by the manufacturer may cause a risk of fire, electric shock, or injury to persons.

**⚠ WARNING: Before obtaining access to terminals, all supply circuits must be disconnected.**

**⚠ ATTENTION! Avant d'accéder au bloc d'alimentation, veuillez couper l'alimentation électrique.**

6. An appropriate disconnect device shall be provided as part of the building installation.
7. Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support the weight of all equipment. Reinforce the structure as required before installing the component.
8. Use this projection screen only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

**Save These Instructions**

## Installation

Before proceeding with the installation please read the installation and operating instructions thoroughly. Make sure to recheck measurements of screen and hanger locations before installation. Area must be clear for screen to operate.

With all lid sections removed from shipping container, remove the screws holding the frame to the shipping container (2 per cross brace). The screen can now be carefully lifted out of the container.

### Method A

The frame can be mounted to ceiling with 5/16" diameter threaded rods. Level frame from front to back and left to right. Mount from all cross braces (Figure 1).

### Method B

Hang from a pipe (fly the screen). Level frame from front to back and left to right. Mount from all cross braces (Figure 2).

**NOTE:** Motor pulley must clear pipe. Chains must clear motor tubes.

#### Suggested Method Of Installation

##### Method A - Secure To Ceiling

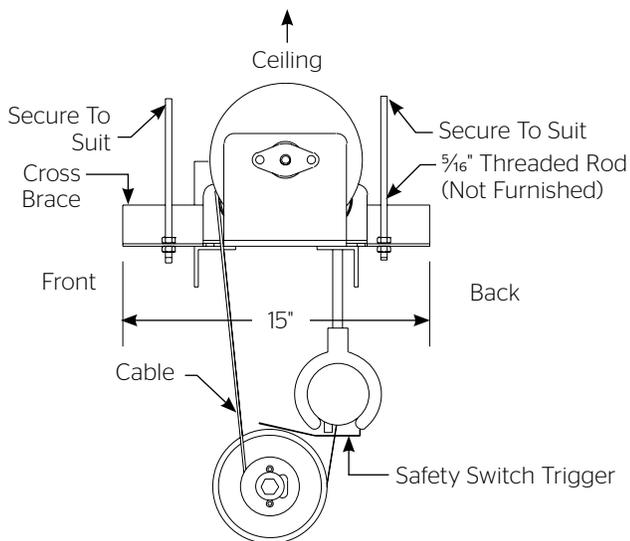


Figure 1

#### Suggested Method Of Installation

##### Method B - "Flying Pipe"

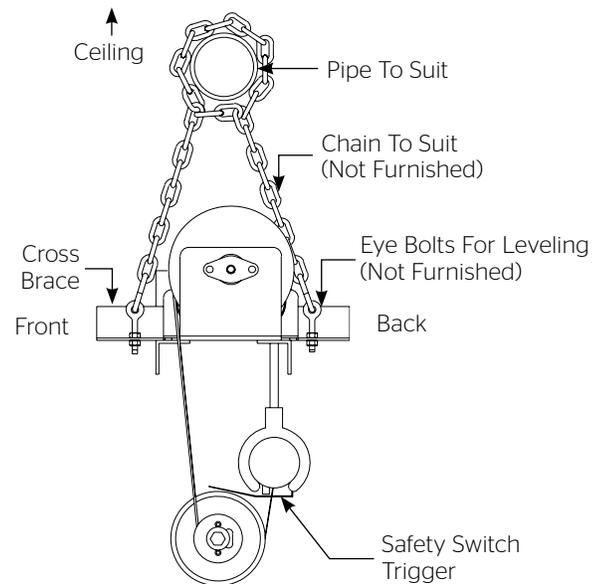


Figure 2

## Electrical Installation

Screen motors have been internally wired at Da-Lite. Wiring designated "external" is completed by installer conforming to local and national codes. Refer to wiring diagram on next page.

Check for satisfactory condition by operating the screen. Be prepared to stop screen. Standard Duty Cycle: 1 MIN. 30 SEC. ON / 45 MIN. OFF.

**⚠ CAUTION! Excessive continuous operation may cause overheating and motors will shut off. Let motors cool 10 to 15 minutes and continue test.**

**⚠ ATTENTION! Le fonctionnement continu et excessif peut provoquer une surchauffe et l'arrêt du moteur. Laissez le moteur refroidir pendant 10 à 15 minutes et poursuivez le test.**


Check the cables to make sure they are winding on the motor and roller pulleys properly.

## Screen Adjustment

1. With screen in complete unrolled position, examine the screen surface carefully. If fabric does not hang flat, loosen the nuts on the eyebolts of the black clamps. Adjust the wingnuts to pull or relax the fabric as needed. Several clamp heights may be adjusted depending on the severity of the hang. After adjustment, tighten the nuts against the underside of the frame. Caution stage hands and others to check area before lowering screen. Do not bump screen with ladders, scenery, etc.

# Motorized Scenic Roller Installation


## 120V Wiring Diagram

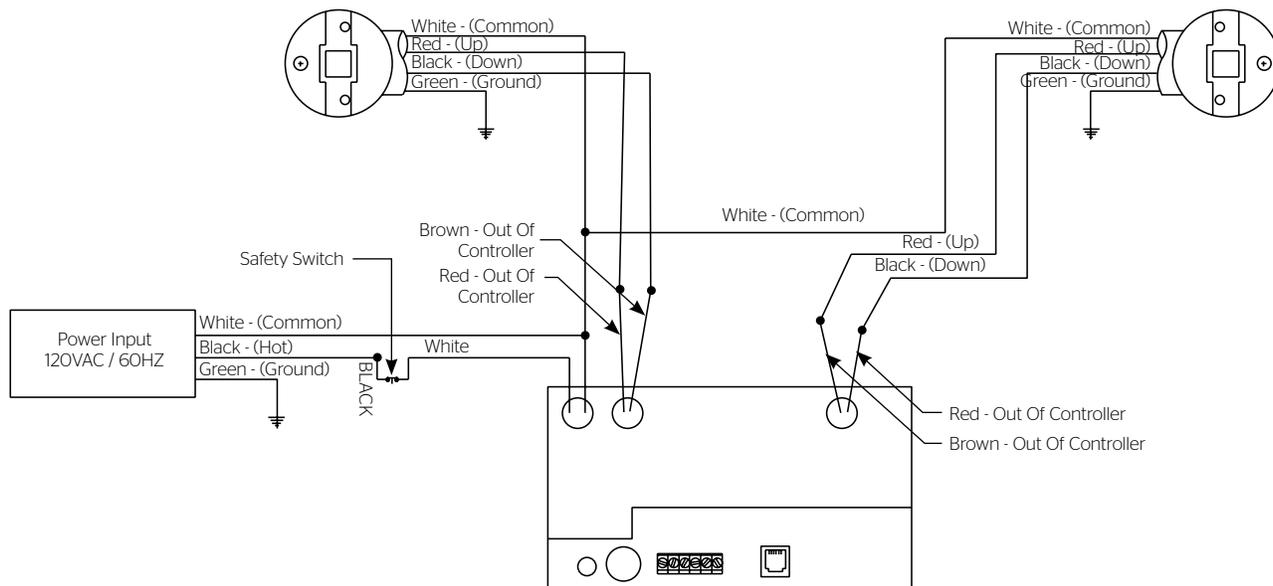

## 240V Wiring Diagram


**NOTES:**

1. FUSE RATED 15A - 250VAC

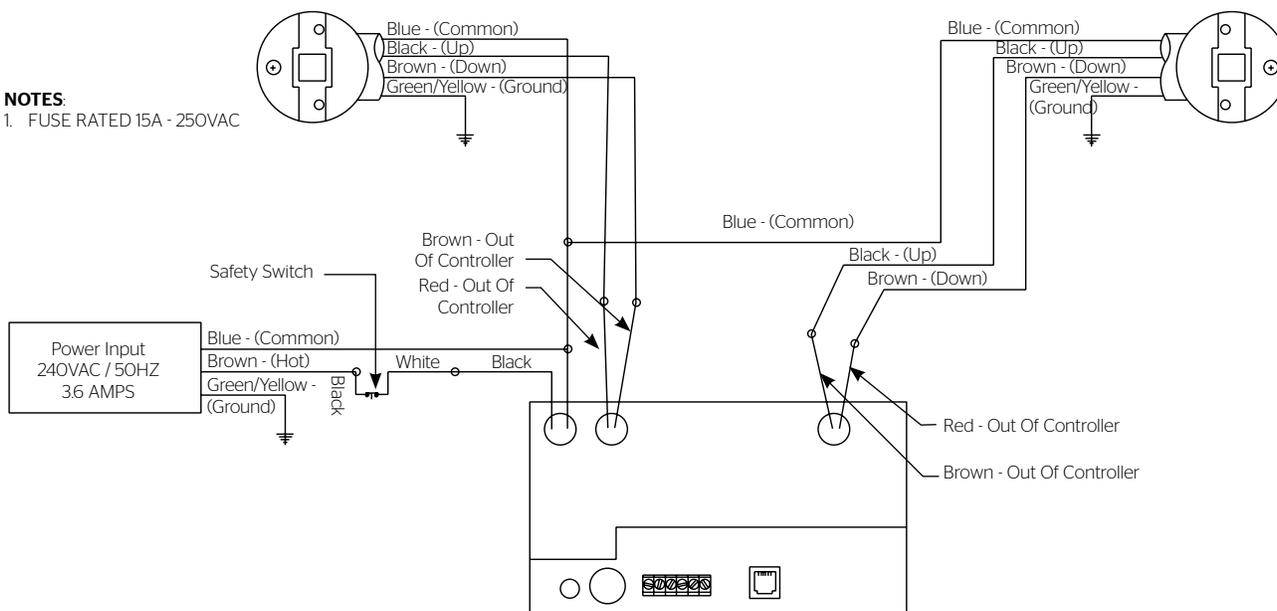

# Motorized Scenic Roller Installation

## 120V / 240V Wall Switch Wiring Diagram

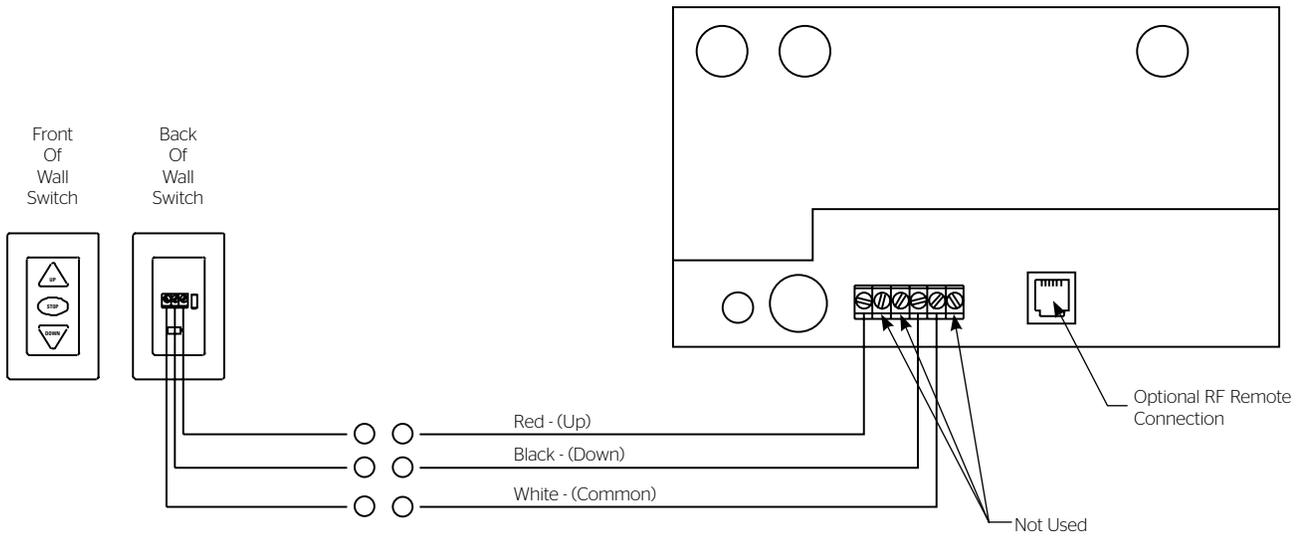

**NOTE:** 20-24AWG wire recommended for connecting wall switch to synchronization controller.

**IMPORTANT!** The wall switch terminal block can be connected inside the wiring compartment. The controller does not need to be removed from the junction box unless an RF remote is being connected. Use caution when removing the controller from the box as it is easily damaged.

## Limit Switch Adjustment

---

The stop positions of the screen are preset at the factory. If adjustments are necessary, the limit switch screws located at the end of each motor can adjust the stop positions. Use a 5/32" hex key or a flat screwdriver. Adjustments should be made in small increments by turning the adjustment screws a half turn at a time. Refer to figure 3.

### Setting The "Down" Limit Position.

#### Screen Drops Too Far:

Left motor (as viewed from audience side): Turn the white limit switch screw clockwise to decrease the amount of fabric drop.

Right motor (as viewed from audience side): Turn the yellow limit switch screw clockwise to decrease the amount of fabric drop.

After adjusting the limit screws on both motors, run the screen down to test the stop position. Repeat until the desired position is set.

#### Screen Does Not Drop Enough:

Left motor (as viewed from audience side): Turn the white limit switch screw counterclockwise to increase the amount of fabric drop.

Right motor (as viewed from audience side): Turn the yellow limit switch screw counterclockwise to increase the amount of fabric drop.

After adjusting the limit screws on both motors, run the screen down to test the stop position. Repeat until the desired position is set. Do not adjust for more drop than what was ordered. At least 1-1/2 wraps of fabric must remain on the roller.

### Setting The "Up" Limit Position.

#### Screen Travels Up Too Far:

Left motor (as viewed from audience side): Turn the yellow limit switch screw clockwise to decrease the amount of travel.

Right motor (as viewed from audience side): Turn the white limit switch screw clockwise to decrease the amount of travel.

After adjusting the limit screws on both motors, run the screen up to test the stop position. If the screen travels up too far, the safety stop switch will be activated and all power to the motors will be shut off. You will have to deactivate the switch by hand. To do this, push down on the switch trigger (see Figure 1) to release the switch and have someone run the screen down. This safety switch is to prevent the screen from traveling too far and binding the motors should the motor limit switches fail.

#### Screen Does Not Travel Up Far Enough:


Left motor (as viewed from audience side): Turn the yellow limit switch screw counterclockwise to increase the amount of travel.

Right motor (as viewed from audience side): Turn the white limit switch screw counterclockwise to increase the amount of travel.

After adjusting the limit screws on both motors, run the screen up to test the stop position. Repeat until the desired position is set.

# Limit Switch Adjustment

---

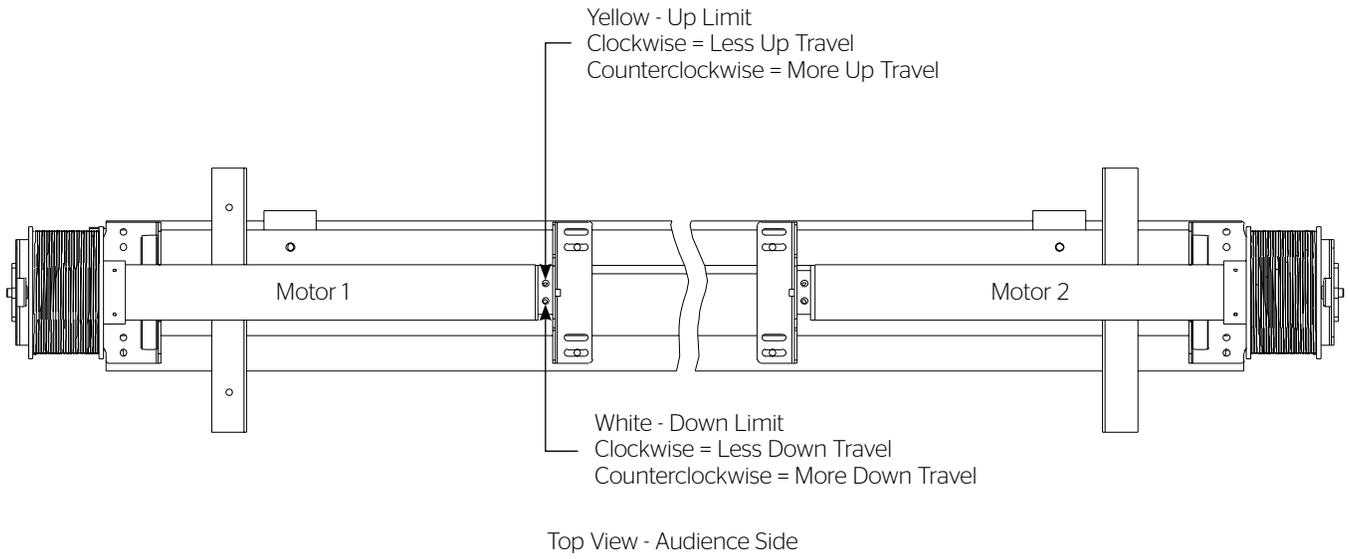

**Figure 3**

## Conditions for Transportation and Storage

---

- Temperature: Between 40 - 100°F (5 - 40°C)
- Relative Humidity: 30% to 70%, non-condensing
- Always keep the projection screen horizontal during transport and storage
- Make sure the entire package is supported when stored
- Do not stack more than six projection screens on top of each other
- Make sure the heaviest package is placed at the bottom of the stack

**Screen surface should be allowed to air out once every two months, or otherwise used on a regular basis, if the temperature is above 72°F (22°C) and at least once every month if the temperature goes above 85°F (30°C).**

### **LIMITED FIVE YEAR WARRANTY ON DA-LITE PRESENTATION PRODUCTS**

Milestone AV Technologies LLC warrants certain Da-Lite branded products to the original purchaser only, to be free from defects in materials and workmanship for a period of five (5) years from the date of purchase by the original purchaser; provided they are properly operated according to Da-Lite's instructions and are not damaged due to improper handling or treatment after shipment from the factory.

This warranty does not apply to equipment showing evidence of misuse, abuse or accidental damage, or which has been tampered with or repaired by a person other than authorized Da-Lite personnel.

Da-Lite's sole obligation under this warranty shall be to repair or to replace (at Da-Lite's option) the defective part of the merchandise. Returns for service should be made to your Da-Lite dealer. If it is necessary for the dealer to return the screen or part to Da-Lite, transportation expenses to and from Da-Lite are payable by the purchaser and Da-Lite is not responsible for damage in shipment. To protect yourself against damage or loss in transit, insure the product and prepay all transportation expenses.

**TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES AS TO FITNESS FOR USE AND MERCHANTABILITY.** Any implied warranties of fitness for use, or merchantability, that may be mandated by statute or rule of law are limited to the five (5) year warranty period. This warranty gives you specific legal rights, and you may also have other rights, which vary from state-to-state. **TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, NO LIABILITY IS ASSUMED FOR EXPENSES OR DAMAGES RESULTING FROM INTERRUPTION IN OPERATION OF EQUIPMENT, OR FOR INCIDENTAL, DIRECT, OR CONSEQUENTIAL DAMAGES OF ANY NATURE.**

In the event that there is a defect in materials or workmanship of a Da-Lite product, you may contact our Customer Care Specialists at 3100 North Detroit Street, Warsaw, IN 46582, (574) 267-8101, (800) 622-3737.

**IMPORTANT: THIS WARRANTY SHALL NOT BE VALID AND DA-LITE BRANDED PRODUCTS SHALL NOT BE BOUND BY THIS WARRANTY IF THE PRODUCT IS NOT OPERATED IN ACCORDANCE WITH THE DA-LITE WRITTEN INSTRUCTIONS.**

Keep your sales receipt to prove the date of purchase and your original ownership.



FOR YOUR IMAGE | [legrandav.com](http://legrandav.com)

USA P 866.977.3901 E [info@da-lite.com](mailto:info@da-lite.com)  
CANADA P 877.345.4329 E [canadainfo@milestone.com](mailto:canadainfo@milestone.com)  
EMEA P +31 495 580 840 E [emea.sales@milestone.com](mailto:emea.sales@milestone.com)  
APAC P +852 2145 4099 E [asia.da-lite@milestone.com](mailto:asia.da-lite@milestone.com)

In British Columbia, Milestone AV Technologies ULC carries on business as MAVT Milestone AV Technologies ULC.  
©2018 Milestone AV Technologies. DL-0278 (Rev. 5) 7/18 Da-Lite is a registered trademark of Milestone AV Technologies. All other brand names or marks are used for identification purposes and are trademarks of their respective owners. All patents are protected under existing designations. Other patents pending.